

GCWPS Capsule Filters

High Capacity PES Membrane



Applications

- ◆ Process Water
- ◆ DI Water
- ◆ Inks & Dyes
- ◆ Specialty Chemicals

GCWPS capsule filters are hydrophilic and manufactured with high capacity polyethersulfone (PES) membrane. The proprietary membrane casting process creates a thick membrane with high dirt holding capacity, excellent retention characteristics and high flow rates.

GCWPS capsule filters are used for removal of particulates from process water, DI water, inks, dyes and specialty chemicals.

High capacity PES is particularly suited for high flow rate filtration of product streams that contain high contaminant loads and have elements that can adsorb to the media, such as preservatives. The lower binding characteristics of PES membrane make it a good choice for inks, dyes, specialty chemicals and service fluids.

Excellent flow rates with excellent retention characteristics

Remove particulates from process water, DI water, inks, dyes, specialty chemicals

Protect processes by removing organic contaminants from water, CIP solutions

Low product adsorption

GCWPS Capsule Filters - Filtration Area

Media	Capsule Length				
	2"	5"	10"	20"	30"
High Capacity PES Membrane	0.9 ft ² (836cm ²)	3.0 ft ² (2788cm ²)	6.0 ft ² (5574cm ²)	12.0 ft ² (11148cm ²)	18.0 ft ² (16722cm ²)

Flow Rate / Filtration Area

The following table represents typical water flow at a one psi (69 mbar) pressure differential across a single 2 inch capsule with 1.0 ft² (930 cm²) of media with 1/2" FNPT ports. The test fluid is water at ambient temperature. Higher pressure drops are acceptable, but as flows increase the pressure drop of the housing becomes more apparent.

Pore Size	0.22 μm	0.45 μm	0.65 μm	1.2 μm
GPM	0.18	0.21	0.68	1.05
LPM	0.68	0.79	2.57	3.97

* For approximate flow rates for 5" through 30" capsules, refer to the appropriate cartridge data sheet

Construction Materials

Housing	Polypropylene
Filtration Media	High Capacity Polyethersulfone (PES) Membrane
Media Support	Polypropylene
End Caps	Polypropylene
Center Core	Polypropylene
Outer Support Cage	Polypropylene
Sealing Method	Thermal Bonding

Maximum Operating Parameters

Liquid Operational Pressure	80 psi (5.5 bar) at 20 °C (68 °F)
Gases Operational Pressure	60 psi (4.1 bar) at 20 °C (68 °F)
Operating Temperature	43 °C (110 °F) at 30 psi (2.1 bar) in water
Forward Differential Pressure	50 psid (3.4 bard) at 20 °C (68 °F)
Reverse Differential Pressure	40 psid (2.7 bard) at 20 °C (68 °F)
Recommended Changeout Pressure	35 psid (2.4 bard)

Sanitization/Sterilization

Autoclave 250° F (121° C), 30 min, multiple cycles

Chemical Sanitization Industry standard concentrations of hydrogen peroxide, paracetic acid, sodium hypochlorite and other selected chemicals.

Note GCWPS capsules are not to be used in steam.

FDA and EC Compliance

All Critical Process Filtration capsule filters are designed to meet the FDA requirements for processing food and beverage products. The materials used to construct GCWPS capsule filters are listed by the FDA as appropriate for use in articles intended for repeated food contact as specified in Title 21 CFR sections 174.5, 177.1500, 177.1520, 177.1630, 177.2440 and 177.2600 as appropriate. Membrane filters comply with Title 21 CFR sections 210.3 (b)(6) and 211.72, for non-fiber releasing filters. All materials used to make the filters are listed in European Commission Regulation EU/10/2011, Annex 1.

Integrity Test Information

Representative samples from each manufacturing lot are tested for integrity to ensure consistent performance.

Extractables

GCWPS capsule filters generally exhibit low levels of non-volatile residues.

Quality Assurance and Standards

Critical Process Filtration uses state of the art computer controlled equipment to consistently produce high quality products as well as significantly reduce hand operations that can compromise quality. All manufacturing and testing is continuously monitored in real time so that data can be quickly and easily analyzed to facilitate improvements in both quality and cost.


The Critical Process Filtration manufacturing and quality systems meet rigorous ISO 9001:2008 standards. Each operation, including assembly, testing, cleaning, drying and packaging, is done in an appropriately rated clean room. Manufacturing is controlled using a sophisticated manufacturing system that networks work stations, manufacturing centers and inspection points. During the manufacturing and inspection processes, data is collected in real time to allow continuous quality monitoring and full traceability of all materials and processes.

Total Performance

Critical Process Filtration, Inc. is a vertically integrated manufacturer of filtration products to industries in which filtration is considered a critical part of the manufacturing process. We supply a complete line of products and services to help you cost effectively satisfy all your filtration requirements from a single source.

Ordering Information

Capsule order number example: General Service Grade High Capacity PES Membrane, 0.22 Micron Rating, Non-Sterile, 10" Length, Sanitary Inlet, Sanitary Outlet = CPGCWPS-20N0001FF.

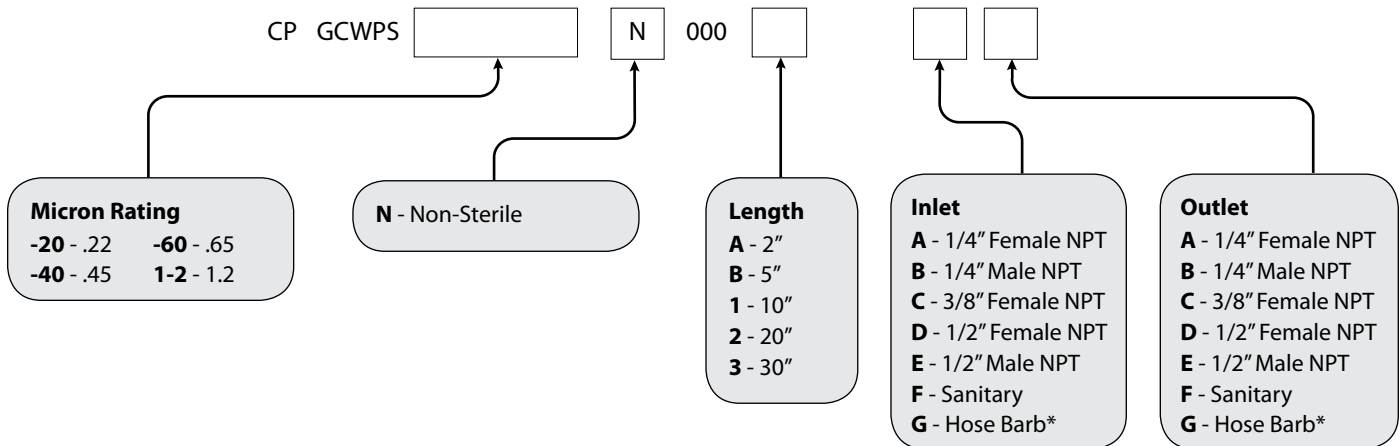

Hose Barb Diameter Ranges*

	Minimum	Maximum
Outer Diameters	11/32" (8.6mm)	9/16" (14.0mm)
Inner Diameters	5/32" (4.0mm)	13/32" (10.5mm)

Request a **QUOTE** from your area representative



Critical Process Filtration, Inc.

One Chestnut Street • Nashua, NH 03060

Tel: 603.880.4420 • Fax: 603.880.4536

criticalprocess.com • sales@criticalprocess.com

The information contained herein is subject to change without notice.

The Critical Process Filtration logo is a trademark of Critical Process Filtration, Inc.

Viton is a trademark of DuPont Performance Elastomers L.L.C.

© 2013-2015 Critical Process Filtration, Inc. • All Rights Reserved • Data Sheet CPGCWPSDS1211 Rev-