

R Rosedale Replacement Baskets

Rosedale manufactures replacement bag filter baskets and basket strainers for a wide range of filter housings made by:

American Felt & Filter
Cuno
Commercial Filters
Filter Specialists (FSI)
Filtration Systems
GAF
Ronningen-Petter
Strainrite
Oakland
Plenty

We offer replacements for all current models, and any that have been discontinued by the original manufacturer.

These replacement baskets are made to specifications that equal, or exceed the original manufacturers specifications.

Basket Construction

STAINLESS STEEL: Standard material is 304 stainless steel. 316 stainless steel is available as an option.

Basket Media Selection

PERFORATED STRAINER AND BAG FILTER BASKETS: For cleanable basket strainers, choose from the following perforation diameters: 1/4, 3/16, 9/64, or 1/16 inch. For filter bag baskets: standard 9/64-inch diameter perforations with 51 percent open area are supplied.



Perforated



With wire mesh lining

PERFORATED WITH WIRE MESH LINING STRAINER AND FILTER BAG BASKETS:

Stainless steel wire is used in mesh sizes 30, 60, 100, 150, or 200. When used as a bag filter basket, the following advantages are realized:

- Fiber migration is minimized.
- In the unlikely event of bag rupture, the wire mesh contains the contaminant.
- Bag material cannot become "lodged" in the perforations due to extreme pressure differential.
- Flow characteristics are enhanced when using monofilament bags.



Model CF
Replaces Commercial Filter baskets SB11, SB12



Model CU
Replaces Cuno baskets 7PC1, 7PC2



Model RP
Replaces Ronningen-Petter baskets 224, 324, 424, 152



Model AFF/GAF
Replaces American Felt & Filter/ GAF baskets 112, 122, AMS R, AMC R, NCX, RBX 1L, RBX 2L

R How To Order

Build an ordering code as shown in the example.

EXAMPLE: **FS1 - BM30 - S316**


BASKET MODEL NUMBER		
Filter Specialists, Inc.	= FSR/FS/FSP	
American Felt & Filter	= AFF	
GAF	= GAF	
Strainrite	= STR	
Ronningen-Petter	= RP	
Filtration Systems	= FF	
Cuno	= CU	
Commercial Filters	= CF	
Oakland	= OA	
Plenty	= PL	
BASKET SIZE (approx., inches)		
OD (nominal)	Length (nominal)	
7	15	= 1
7	30	= 2
4	6	= 3
4	12	= 4
BASKET TYPE		
Perforated filter bag basket	= B	
Perforated strainer basket	= P	
Mesh lined perforated filter bag basket	= BM	
Mesh lined strainer basket	= M	
Heavy wire mesh filter bag basket	= HWM	
BASKET MEDIA SIZE		
Perforation diameters (for P type baskets)*		
1/4, 3/16, 9/64, 1/16		
Mesh sizes (for BM and M baskets)		
30, 60, 100, 150, or 200		
OPTIONS		
304 stainless steel construction	= S	
All 316 stainless steel construction	= S316	

*Additional options available. Consult factory.

Rosedale can manufacture any basket to your specifications.

Send us a drawing, or just a simple sketch as shown, and we'll submit a quote for your review.

- A = Basket diameter
- B = Basket height
- C = Bail height
- D = Outside diameter of rim

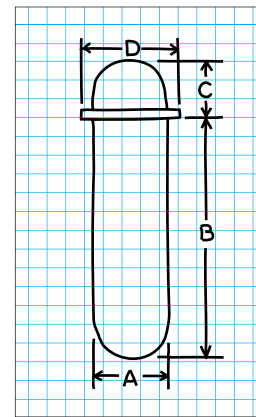


Basket Designs

Standard filter bag baskets have rounded perforated bottoms.

Mesh lined bag baskets have round solid bottoms.

Strainer baskets have flat non-perforated bottoms.

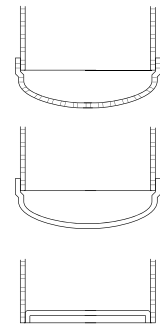

Model STR
Replaces Strainrite baskets
UF1-90, UF1-180



Model FF
Replaces Filtration Systems
baskets 112, 122



Model FSR



Model FS

Model FSR or FS
Replaces all Filter
Specialists baskets